

(12) UK Patent Application (19) GB (11) 2 070 470 A

- (21) Application No 8106572
(22) Date of filing 3 Mar 1981
(30) Priority data
(31) 3008212
(32) 4 Mar 1980
(33) Fed. Rep. of Germany (DE)
(43) Application published
9 Sep 1981
(51) INT CL³
H02K 15/085
(52) Domestic classification
B3A 188
H2A DF
(56) Documents cited
None
(58) Field of search
B3A
H2A
(71) Applicants
Robert Bosch GmbH,
Postfach 50, 7000
Stuttgart 1, Federal
Republic of Germany
(72) Inventors
Helmut Kreuzer,
Manfred Frister
(74) Agents
W. P. Thompson & Co.,
Coopers Building, Church
Street, Liverpool L1 3AB

(54) Improvements in or relating to methods of manufacturing stator windings for three-phase generators

(57) A method of winding stator windings of three-phase generators is disclosed, particularly for use on an automatic winding machine, in which the starts of the windings required for the three phases are introduced into adjacent slots in the stator, successive partial windings of a winding are wound in alternate directions and,

after winding a partial winding 43 of a first phase winding 40, the corresponding partial windings 44, 45 of the other two phase windings 41, 42 are wound before the next partial winding 46 of the first phase winding is wound, and so on, and the start and end W, Z of one phase winding are transposed electrically when the windings are inter-connected after completion of winding: an optimum filling factor of the slots similar to that of a two-layer winding can be obtained.





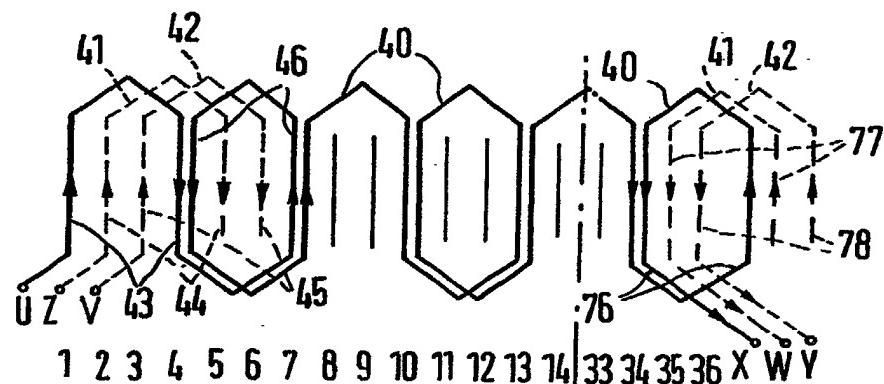


FIG.1

GB 2 070 470 A

2070470

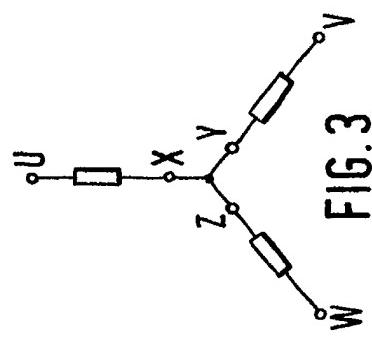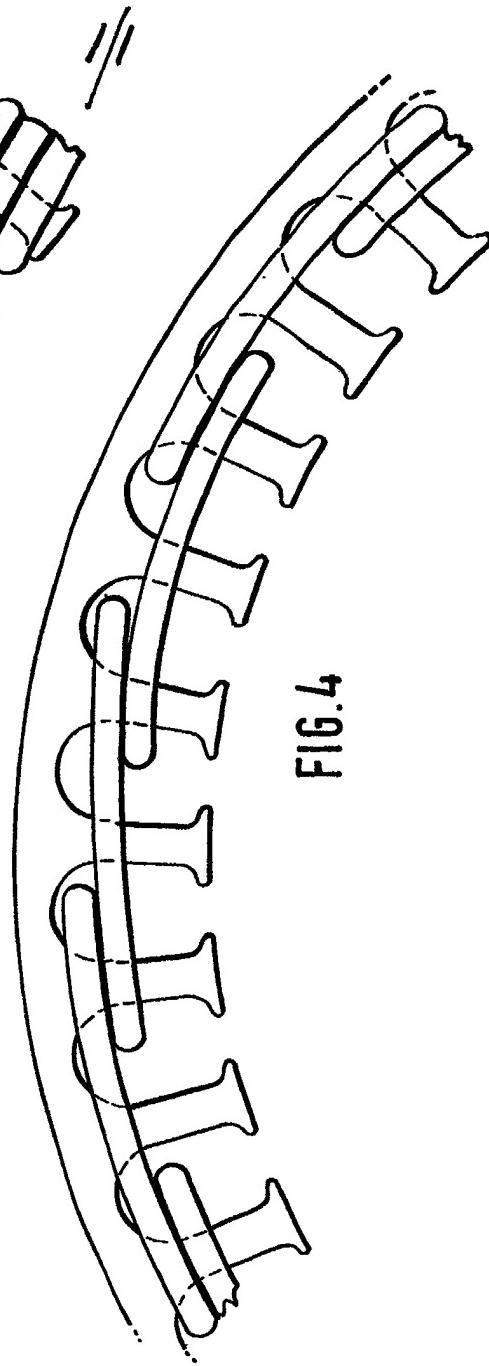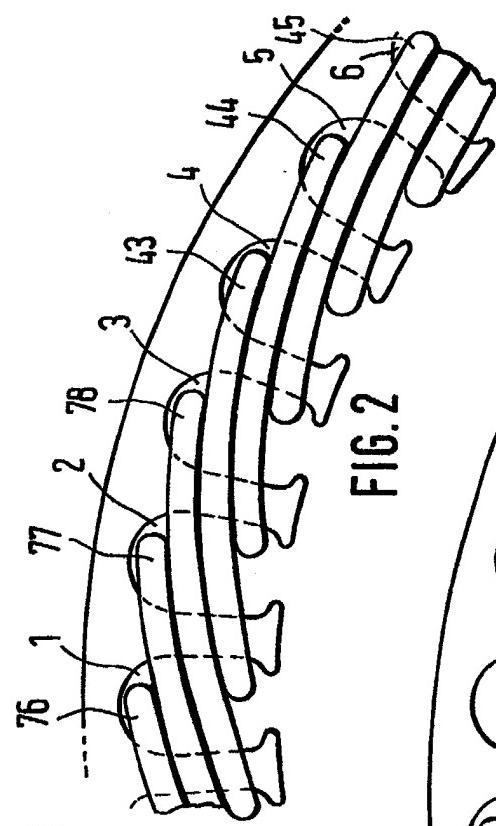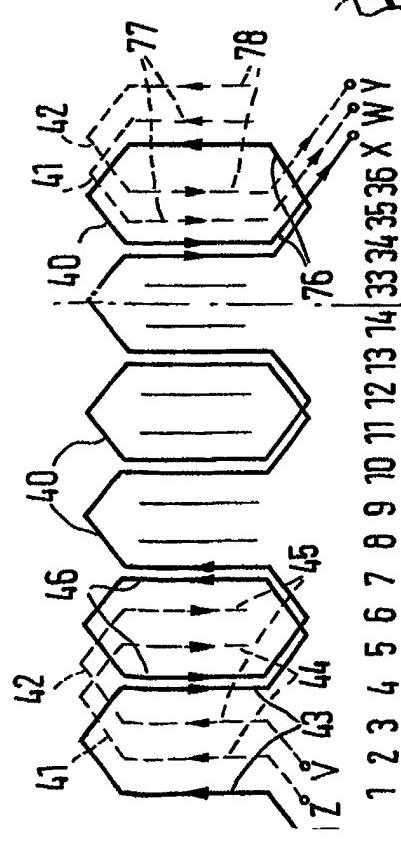

SPECIFICATION

Improvements in or relating to methods of manufacturing stator windings for three-phase generators

- 5 The present invention relates to methods of manufacturing stator windings for three-phase generators.
- 10 One method of manufacturing stator windings for three-phase generators, particularly a method for use on an automatic winding machine, is disclosed, for example, in German Offenlegungsschrift No. 2,750,112. In this known mechanical method, the filling factor in the slots of the stator is increased, relative to a conventional
- 15 lap winding, or wave winding by means of a special winding mechanism. However, the filling factor is further improved by the so-called two-layer windings which are wound manually and in which the partial windings are superimposed one 20 on the other in a manner like fish scales.
- According to the present invention there is provided a method of manufacturing stator windings for three-phase generators, particularly a method for use on an automatic winding machine,
- 25 in which method the winding for each phase comprises a plurality of partial windings each having at least one turn, the starts of the windings required for the three phases are introduced into adjacent slots in the stator, the partial windings of
- 30 each winding are successively wound in alternate directions with two other slots located between the two slots into which coil-sides of a partial winding are introduced, and, after a partial winding of a first phase winding has been wound,
- 35 the corresponding partial windings of the other two phase windings are wound before the next partial winding of the first phase winding is wound and the start and end of one phase winding are electrically transposed when the windings are 40 interconnected after completion of winding.
- A method in accordance with the present invention can have the advantage that an arrangement of the partial windings similar to that of a two-layer winding can be obtained by a
- 45 method which can be performed in a simple manner by a machine. An optimum filling factor can result in the case of small end-turns between coil-sides.
- The invention will be further described by way 50 of example with reference to the accompanying drawings in which:-
- Fig. 1 is a winding diagram of one embodiment of the invention,
- Fig. 2 is a partial end view of a resultant stator 55 showing the relative positions of end-turns and coil-sides and stator slots,
- Fig. 3 is a circuit diagram showing the interconnection of the windings to form a three-phase generator, and
- 60 Fig. 4 is a detail view corresponding to Fig. 2 showing the positions of end-turns and coil sides of a known wave winding.

- 65 slots. This results in twelve partial windings (and consequently also twelve coil sides) for each phase. In order to simplify the illustration, only slots 1 to 14 and 33 to 36 of the thirty-six slots are shown, and only one winding 40 associated with one phase is shown in its entirety. The starts and ends of the other two windings 41, 42 associated with the other two phases are shown by broken lines. The winding method is performed in the following manner:
- 70 The winding operation is commenced with the first winding 40 and coil-sides of the first partial winding 43 are introduced into the slots 1 and 4 by winding in a clockwise direction. The corresponding coil-sides of the first partial
- 75 windings 44, 45 of the other two windings 41, 42 are subsequently introduced into the slots 2 and 5 and 3 and 6 respectively in a corresponding manner. The coil-sides of the second component partial winding 46 of the winding 40 are
- 80 subsequently introduced into the slots 7 and 4 by winding in an anti-clockwise direction, in turn followed by the corresponding partial windings of the windings 41 and 42. This procedure is continued, that is to say, windings are wound
- 85 alternately in a clockwise direction and in an anti-clockwise direction in the case of each winding, the three corresponding partial windings of the three phases being wound successively. In order to simplify the illustration, each partial winding is
- 90 illustrated as only one turn. It will be appreciated that the number of turns is optional and depends upon the spatial conditions and the electrical requirements. The winding method which has been described results in an arrangement of the
- 95 end-turns between the coil-sides as shown in Fig. 2, that is to say, these coil-sides and end-turns are superimposed one on the other in a manner like fish scales, thus resulting in a very large filling factor in the slots.
- 100 The starts of the three windings 40 to 42 are designated U, Z, V and their ends are designated X, W, Y. The individual windings are then interconnected in a known configuration, such as a star circuit as shown in Fig. 3. The winding ends
- 105 X, Y, Z are usually interconnected to form a common star point. An electrical angle of 120 degrees relative to the other phases is produced by electrical transposition of the start and the end of the second winding 41
- 110 commencing in slot 2. Thus, an electrical angle of 120 degrees exists between all three windings. Thus, the star point is formed by the start of the second winding and the ends of the first and third windings.
- 115 If it is also desired to retain the uniform scale-like pattern of the end-turns at the start or the end of the winding, only one coil-side of each of the partial windings 43 to 45 is introduced into the slots 4 to 6 at the commencement of the winding
- 120 operation. The oppositely located coil-sides of these partial windings are first located outside the slots 1 to 3. In the same manner as in the known
- 125

the last partial windings 76 to 78 have been wound. This results in a completely uniform end-turn pattern. It will be appreciated that, in a simplified method, if one accepts a slight disorder 5 in the end-turn pattern, only half the coil-side of the winding 43 or only half the coil-sides of the windings 43 and 44 can be introduced at the commencement of winding.

Fig. 4 shows the arrangement of the end-turns 10 between coil-sides in the known wave winding. The more unfavourable filling factor is clearly shown, so that a larger volume is required for the same generator output.

CLAIMS

15 1. A method of manufacturing stator windings for three-phase generators, particularly a method for use on an automatic winding machine, in which method the winding for each phase comprises a plurality of partial windings each 20 having at least one turn, the starts of the windings required for the three phases are introduced into adjacent slots in the stator, the partial windings of each winding are successively wound in alternate directions with two other slots located between

- 25 the two slots into which coil-sides of a partial winding are introduced, and after a partial winding of a first phase winding has been wound, the corresponding partial windings of the other two phase windings are wound before the next partial 30 winding of the first phase winding is wound, and the start and end of one phase winding are electrically transposed when the windings are interconnected after completion of winding.
2. A method as claimed in claim 1, in which 35 coil-sides of the last partial windings of each of the windings are laid below the respective coil-sides of the first partial windings.
3. A method as claimed in claim 2, in which when winding the first partial windings only one 40 respective coil-side of each partial winding is introduced into one respective slot and the other coil-sides of the first partial windings are introduced into the other respective slots by folding in only after the last partial windings have 45 been wound.
4. A method of manufacturing stator windings for three-phase generators, substantially as hereinbefore particularly described with reference to and as illustrated in Figs. 1 to 3 of the 50 accompanying drawings.